



SB23

User Manual

INTRODUCTION

Have you been looking for a new speaker to take to the park? This one is the perfect park pal! Its stunning front face is a real head turner. It has a beautiful light up design in the front that will attract crowds. The sound is perfect for a day at the park with the kids or a day at the park with the dogs. Everyone will get a kick out of this speaker. And when listening to music isn't what you want anymore, there's a karaoke feature to spice it up! Everyone will have a blast with this speaker.

PACKAGE CONTENTS

- 1x Speaker
- 1x Microphone
- 1x Charging Cable

1

PRODUCT OVERVIEW



1. Mode
2. Previous/Volume Down
3. Play/Pause (Short press for play and pause)/Scan
4. Next/Volume Up
5. LED Indicator
6. USB Slot
7. TF/Micro SD Card
8. Charging Port
9. AUX-In Slot
10. Power ON/OFF Switch



1. Mode
2. Previous/Volume Down
3. Play/Pause (Short press for play and pause)/Scan
4. Next/Volume Up

- a. AUX Plug
- b. ON/OFF Switch
- c. Receiver



2

SPECIFICATIONS & FEATURES

- Speaker is approx 10.25 in x 7.25 in x 4.25 in
- Bluetooth: v5.3
- Woofer Size: 6.5"
- Woofer Output: 1000W
- Range: 33ft
- Battery: 1200mAh
- Playing time: Up to 5 hours
- Charge Time: 3 hours
- True Wireless Capabilities
- FM Radio
- Inputs: AUX / USB / MicroSD
- Karaoke Mic

3

HOW TO USE

Using MicroSD (TF) Card Slot - Max Capacity is 16GB

- 1) Insert the Micro SD (TF) Card or USB Drive preloaded with songs.
- 2) Speaker will automatically start playing songs
- 3) During playback, short press the Previous button to go back to the previous track, press the Next button to skip to the next track.

Using Bluetooth

- 1) Power on the product to enter into BT mode.
- 2) Search for and select "PopBox" on your external Bluetooth device.
- 3) The speaker will issue an indication tone after successful connection.

Using Radio

- 1) Press the mode button and choose FM mode.
- 2) Short press Play/Pause button to begin scanning for all available stations.
- 3) Short press it again to stop searching.
- 4) Press Next button to select the next stations.

Using AUX

- 1) Power on the unit, and cycle through Modes to the AUX IN selection.
- 2) Plug your AUX Cable in the AUX IN Port and use device to select/play music.

Using Karaoke

- 1) Insert the plug of the Microphone into the unit's MIC jack.

4

CARE AND SAFETY

- Do not use this unit for anything other than its intended use.
- Keep the unit away from heat source, direct sunlight, humidity, water or any other liquid.
- Do not operate the device to extremely high or low temperatures, as it may damage the battery.
- Do not operate the unit if it has been wet or moist to prevent against electric shock and/or injury to yourself and damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Keep the unit out of reach of children.
- This unit is not a toy.

BATTERY DISPOSAL:

This product contains a lithium polymer battery. Lithium polymer batteries are environmentally safe when fully discharged. Please refer to your local and state laws for battery disposal procedures.