

# Mag Charge

## Wireless Charging Magnetic Power Bank



## PBW5 User Manual

### INTRODUCTION

With MagSafe Wireless charging, this powerbank delivers SuperFast 15W charging for your compatible iPhone, providing the ultimate convenience and speed. Despite its sleek, portable design, it packs a high-capacity 5,000 mAh battery, ensuring your device stays powered up when you need it most. Whether you're traveling, at work, or out and about, this powerbank is the perfect companion to keep your devices charged without the hassle of tangled cables

### SPECS & FEATURES

- 15 Watts MagSafe SuperFast Wireless Charging
- 5,000 mAh Power Supply
- High-Performance Lithium Ion Battery
- Can Charge 3 Devices At Once
- Type-C & USB-A Input & Output
- Overcharge Protection
- LED Charge Indicator Lights
- Convenient Portable Design

### PRODUCT OVERVIEW



### HOW TO USE

**Charge the Powerbank:** Before using the powerbank for the first time, charge it using the provided cable (typically USB-C to USB-A or USB-C to USB-C). Plug one end into a wall adapter or power source, and the other end into the powerbank. The powerbank will show the charging status through LED indicators.

**Charging Your Device via MagSafe (For iPhones with MagSafe):**

For MagSafe-compatible iPhones, simply place your phone directly on the MagSafe charging pad of the powerbank. The magnets will automatically align and securely attach the phone to the powerbank. Your device will start charging automatically at 15W super-fast wireless charging.

**Charging Other Devices (Wired Charging):**

If your device does not support MagSafe, you can still charge it using the powerbank's USB-A or USB-C output ports (depending on your device's compatibility). Plug the appropriate cable into one of the output ports and connect the other end to your device. Your device will begin charging.

**Checking the Battery Level:**

Press the power button on the powerbank to check its remaining charge. The LED indicators will show how much power is left in the powerbank.

**Turning Off the Powerbank:**

When you're done using the powerbank, press the power button again to turn it off and save battery."

### CARE AND SAFETY

Regularly wipe down the powerbank with a soft, dry cloth to remove dust and dirt. Avoid using harsh chemicals or abrasive materials, as they can damage the surface of the powerbank. Keep the powerbank away from water, rain, or moisture. Using it in wet conditions can cause internal damage or short-circuiting. Ensure that you are using the correct charging cables for wired charging."

### PACKAGE INCLUDES

- Power Bank
- Type-C Charging Cable