

SB27

User Manual

## INTRODUCTION


This is probably the coolest speaker on the Bluestone market. It has dynamic spinning light show on its front woofers that you're just not able to find anywhere else. This speaker is made to make a splash at your next party. It is suppose to be the center of attention and the center of the conversation. That is, if you can manage to talk over it. Bring this to every party you can think of, never miss a moment to show it off and use it up. The perfect next addition to any party with its perfect on the go handle.

## PACKAGE CONTENTS


- 1x Speaker
- 1x Charging Cable

1

## PRODUCT OVERVIEW

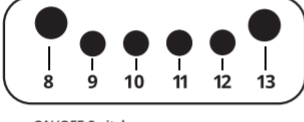

1. Power ON/OFF Switch
2. AUX-In Slot
3. TF/Micro SD Card
4. USB Slot
5. Mic Port
6. Charging Port
7. LED Indicator
8. Lights
9. Mode
10. Previous/Volume Down
11. Play/Pause (Short press for play and pause)/Scan
12. Next/Volume Up
13. Bass

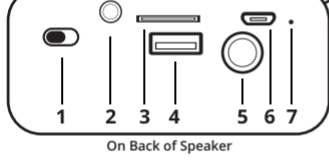

On Back of Speaker

2

## SPECIFICATIONS & FEATURES

- Speaker is approx 14 in x 6.25 in x 5.75 in
- Bluetooth: v5.3
- Woofer Size: 2 x 4"
- Woofer Output: 2000W
- Range: 33ft
- Battery: 1200mAh
- Playing time: Up to 5 hours
- Charge Time: 3 hours
- True Wireless Capabilities
- FM Radio
- Inputs: AUX / USB / MicroSD
- Karaoke Mic

3

## HOW TO USE

### Using MicroSD (TF) Card Slot - Max Capacity is 16GB

- 1) Insert the Micro SD (TF) Card or USB Drive preloaded with songs.
- 2) Speaker will automatically start playing songs
- 3) During playback, short press the Previous button to go back to the previous track, press the Next button to skip to the next track.

### Using Bluetooth

- 1) Power on the product to enter into BT mode.
- 2) Search for and select "ClubBox" on your external Bluetooth device.
- 3) The speaker will issue an indication tone after successful connection.

### Using Radio

- 1) Press the mode button and choose FM mode.
- 2) Short press Play/Pause button to begin scanning for all available stations.
- 3) Short press it again to stop searching.
- 4) Press Next button to select the next stations.

### Using AUX

- 1) Power on the unit, and cycle through Modes to the AUX IN selection.
- 2) Plug your AUX Cable in the AUX IN Port and use device to select/play music.

### Lights

- 1) Press the lights button to cycle through the light modes

4

## CARE AND SAFETY

- Do not use this unit for anything other than its intended use.
- Keep the unit away from heat source, direct sunlight, humidity, water or any other liquid.
- Do not operate the device to extremely high or low temperatures, as it may damage the battery.
- Do not operate the unit if it has been wet or moist to prevent against electric shock and/or injury to yourself and damage to the unit.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at reach risk.
- Keep the unit out of reach of children.
- This unit is not a toy.

### BATTERY DISPOSAL:

This product contains a lithium polymer battery. Lithium polymer batteries are environmentally safe when fully discharged. Please refer to your local and state laws for battery disposal procedures.